

# **LEVEL**

---


# **NEXT**

## BIG BOOT BOARD FOR YAMAHA 120 & ARCTIC CAT ZR 120


PART # BORDCAT (last revision 12/24/19)


### **PERFORMANCE PRODUCTS**

- 1.) Remove back bumper and heel guards by drilling out rivets. (3/16 drill bit works best) (4 on each side)
- 2.) Remove old running board by cutting on marked line below with die grinder or plasma cutter.

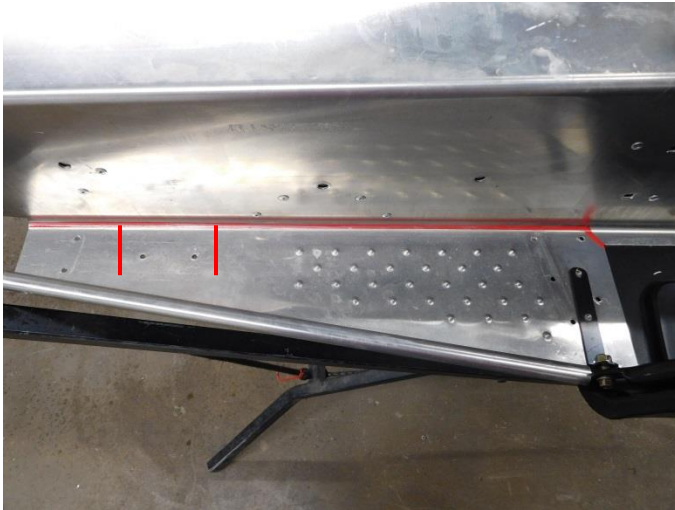

- Clamp the board down tight to the tunnel, mark 3 suspension plate holes from the backside and drill the holes to 7/8" as shown below.

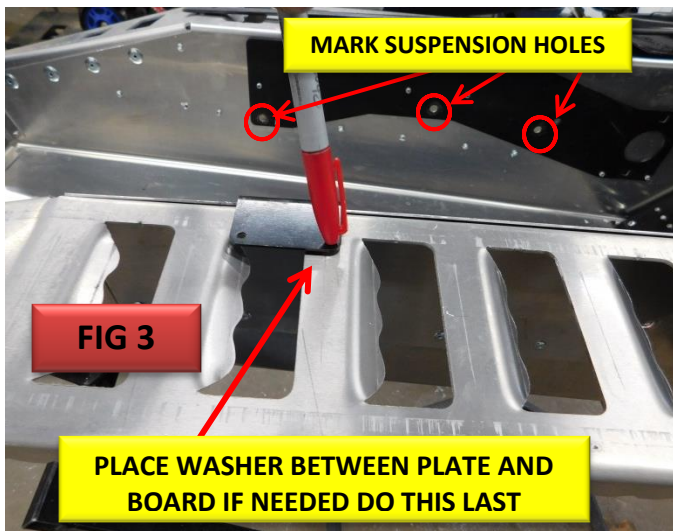

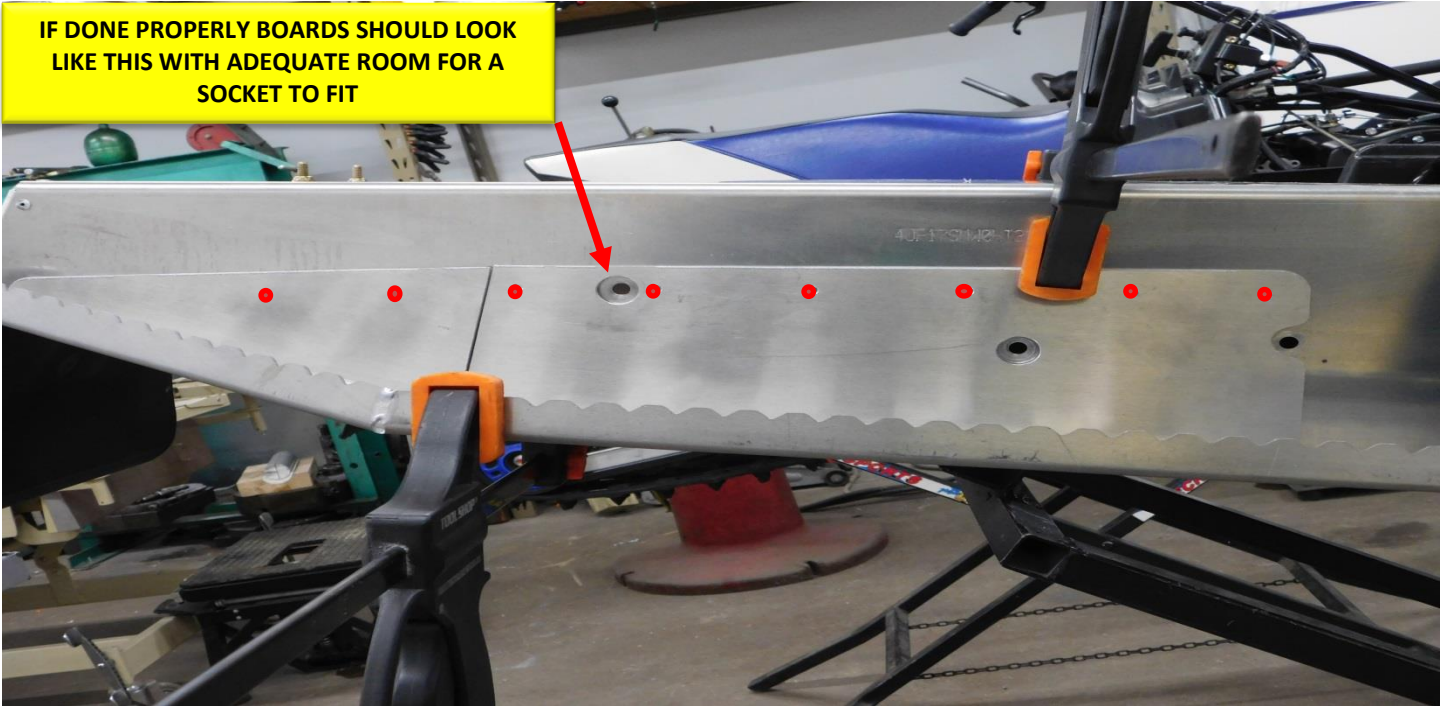

- Reinstall bumper, align, drill and rivet bumper end hole (see FIG 3)
- Drill and rivet the remaining holes approximately 3" apart and a ½" down with the remaining rivets supplied .
- Drill and rivet suspension plate to the board (see FIG 3).
- **(NOTE: RIVETS BEHIND THE BOARDS DO NOT NEED TO BE REMOVED. THE BOARDS WILL NOT FIT FLAT AGAINST THE TUNNEL. THIS IS OKAY :)**

TECH LINE IS AVAILABLE AT (319) 462-6932 MONDAY 9 AM TO 5 PM, TUESDAY AND WEDNESDAY 9 AM TO NOON CENTRAL STANDARD TIME. OR VISIT US AT [www.recmotor.com](http://www.recmotor.com). THANK YOU.

\*\*\*\*\*PLEASE NOTE\*\*\*\*\*

**This product is intended for closed-course racing only and is sold "as-is" without warranty. Manufacturer and distributor specifically disclaim all responsibility for consequential and incidental damages or any other losses arising from the use of this product. Any dispute arising out of the use of this product must be settled in Linn County, Iowa under Iowa law.**

\*\*\*\*\*

