




200 BULKHEAD & A-ARM
REINFORCEMENT KIT INSTRUCTIONS
REVISED 7/19/2023
PART # 200 BHARK

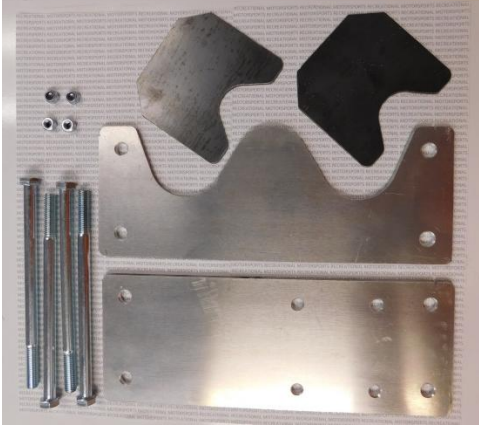

KIT CONTENTS AS SHOWN

IMPORTANT NOTE: When installing this kit on 2018 and 2019 sleds (**without**) the factory handlebar riser kit installed, you will need to grind the pivot bolt nuts for steering post clearance.

Make sure when installing reinforcement plates that the 2 notches are aligned as shown for correct fit.



When welding on Aarm reinforcements it is VERY important that you only grind off enough paint to get to bare metal, grinding deeper will weaken Aarm tubing. Weld in 6 locations shown with silver marker.

TECH LINE IS AVAILABLE AT (319) 462-6932 MONDAY TO FRIDAY 9 AM TO 5 PM CENTRAL STANDARD TIME. OR VISIT US AT www.recmotor.com. THANK YOU.

*****PLEASE NOTE*****

Manufacturer and distributor specifically disclaim all responsibility for consequential and incidental damages or any other losses arising from the use of this product. Any dispute arising out of the use of this product must be settled in Linn County, Iowa under Iowa law.
